



carona 60s revival



7071.34021
REVIVAL ROT
Mokkatasse
Tasse à espresso
12 cl
VE/UE 6
CHF 12.00



7071.34022
REVIVAL ROT
Mokka-Untere
Soutasse à espresso
Ø 12 cm
VE/UE 6
CHF 7.00



7071.34023
REVIVAL ROT
Kaffeetasse
Tasse à café
24 cl
VE/UE 6
CHF 15.00



7071.34024
REVIVAL ROT
Kaffee-Untere
Soutasse à café
Ø 15 cm
VE/UE 6
CHF 8.00



7071.34025
REVIVAL ROT
Teller flach
Assiette plate
Ø 20 cm
VE/UE 6
CHF 17.50



7071.34001
REVIVAL GELB
Mokkatasse
Tasse à espresso
12 cl
VE/UE 6
CHF 12.00



7071.34002
REVIVAL GELB
Mokka-Untere
Soutasse à espresso
Ø 12 cm
VE/UE 6
CHF 7.00



7071.34003
REVIVAL GELB
Kaffeetasse
Tasse à café
24 cl
VE/UE 6
CHF 15.00



7071.34004
REVIVAL GELB
Kaffee-Untere
Soutasse à café
Ø 15 cm
VE/UE 6
CHF 8.00



7071.34005
REVIVAL GELB
Teller flach
Assiette plate
Ø 20 cm
VE/UE 6
CHF 17.50



7071.34011
REVIVAL MINT
Mokkatasse
Tasse à espresso
12 cl
VE/UE 6
CHF 12.00



7071.34012
REVIVAL MINT
Mokka-Untere
Soutasse à espresso
Ø 12 cm
VE/UE 6
CHF 7.00



7071.34013
REVIVAL MINT
Kaffeetasse
Tasse à café
24 cl
VE/UE 6
CHF 15.00



7071.34014
REVIVAL MINT
Kaffee-Untere
Soutasse à café
Ø 15 cm
VE/UE 6
CHF 8.00



7071.34015
REVIVAL MINT
Teller flach
Assiette plate
Ø 20 cm
VE/UE 6
CHF 17.50